

INLINE REMOTE: PLAY/PAUSE, PREVIOUS & NEXT BUTTONS - CORRESPONDING FUNCTIONS PER MOBILE DEVICE MAKE, MODEL & OS					
MAKE	MODEL	OS VERSION	PLAY/PAUSE Button ► Corresponding Functions	PREVIOUS Button ◀◀ Corresponding Functions	NEXT Button ▶▶ Corresponding Functions
APPLE	iPHONE 4S	iOS 5.1.1	<ul style="list-style-type: none"> - Press once to play and press again to pause - Press twice for next track - Press three times for previous track 	N/A	N/A
	iPHONE 5	iOS 8.1			
	iPHONE 5C	iOS 7.1.2			
	iPHONE 5S	iOS 8.1			
	iPHONE 6	iOS 8			
	iPHONE 6S	iOS 9			
SAMSUNG	GT-S5660	Android 2.3.6	<ul style="list-style-type: none"> - Press once to play and press again to pause - Press twice for next track - Press three times for previous track 	N/A	N/A
	GT-S7572	Android 4.1.1			
	GT-N7100	Android 4.1.1			
	GT-I9268	Android 4.1.1			
	N7506 4G	Android 4.3			
	S3 i9300	Android 4.3			
	Galaxy A8	Android 5.1.1			
	Galaxy A7	Android 5.1.1			
	Galaxy A5	Android 5.0.2			
HTC	G21	Android 4.0.3	<ul style="list-style-type: none"> - Press once to play and press again to pause - Press once for previous track - Press once for next track 	- Volume up	- Volume down
	X315e	Android 4.0.3			
	820mu	Android 4.4.2			
	D820u	Android 4.4.2			
	M8Sw	Android 4.4.2			
	M8w	Android 4.4.4			
	D820us	Android 4.4			
	D826W	Android 5			
	ONE 4G	Android 4.4			
	D626	Android 4.4			
SONY	M50W	Android 4.4	<ul style="list-style-type: none"> - Press once to play and press again to pause - Press twice for next track - Press three times for previous track 	- Volume up	- Volume down
	L55t	Android 4.4			